


Instructions to send program into MSM column

If connecting directly between your PC and the column you must use a **CROSSOVER ETHERNET CABLE!**


If you haven't changed the network setting of the MSM column the default IP address is 192.168.11.128

You must change your IP address on your PC to be on the subnet. Example: 192.168.11.XXX with XXX being a number between 1 and 127. **Do not make your PC address 192.168.11.128 as this will conflict with IP address of the MSM column.**


Open the Stotz – MSM Tools – LDP Send-Receive program as shown below

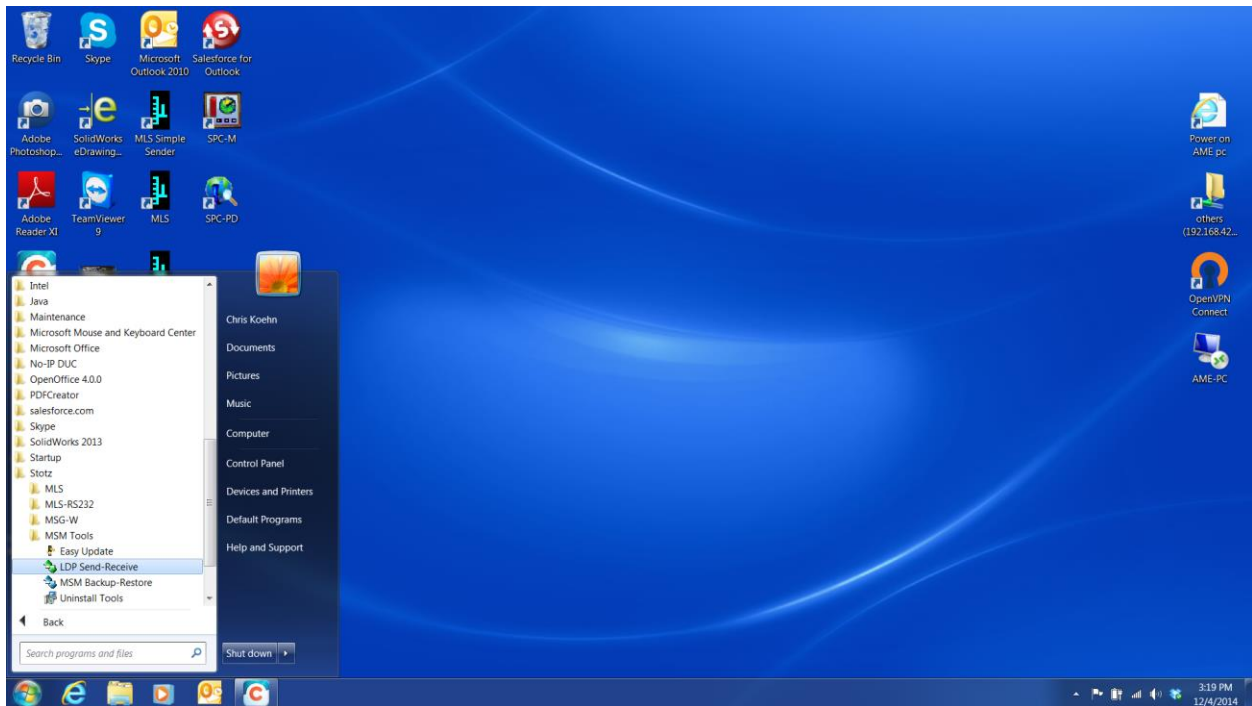


Your screen will look like below. Click the Send LDP button

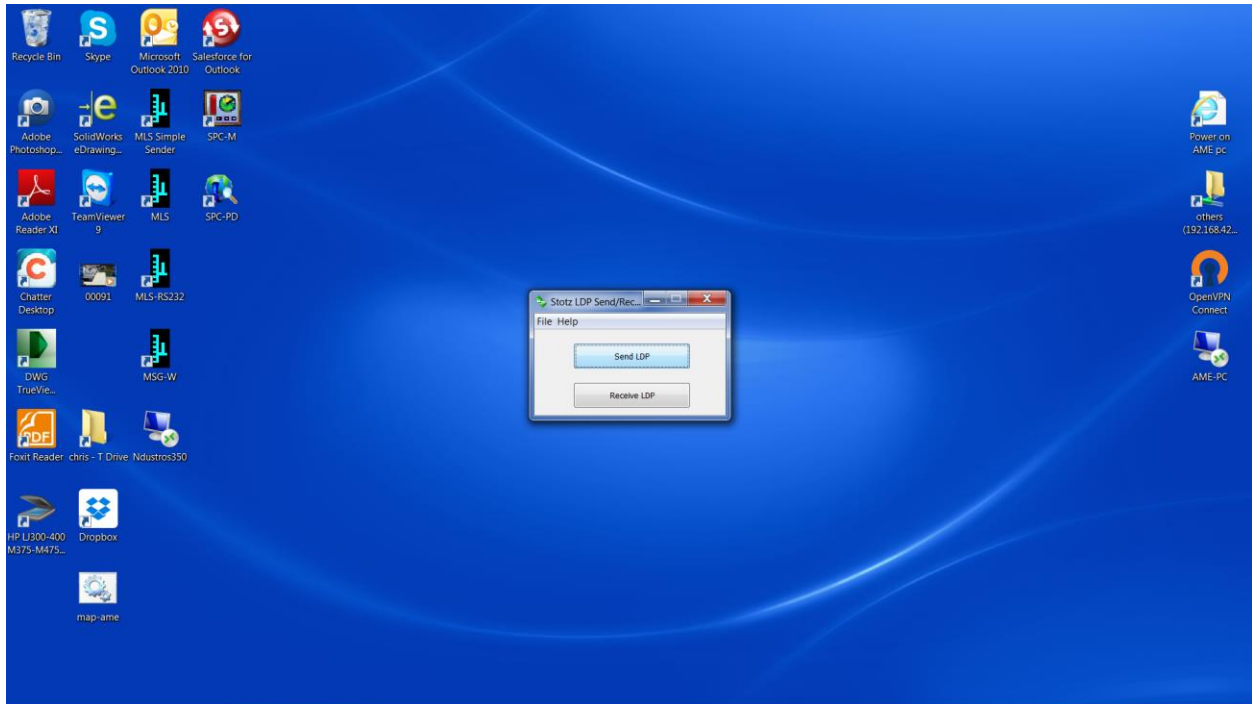


Choose the file that was emailed to you wherever you stored it as in the example below.

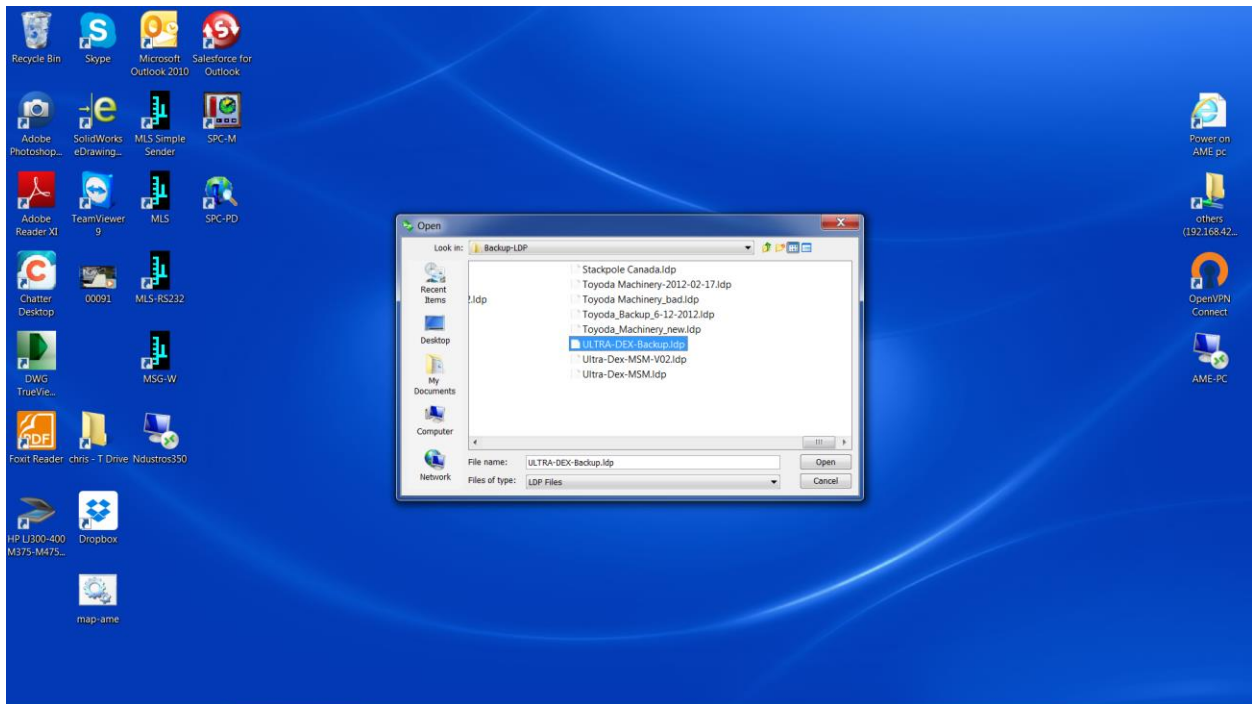


Your screen will then look like below:

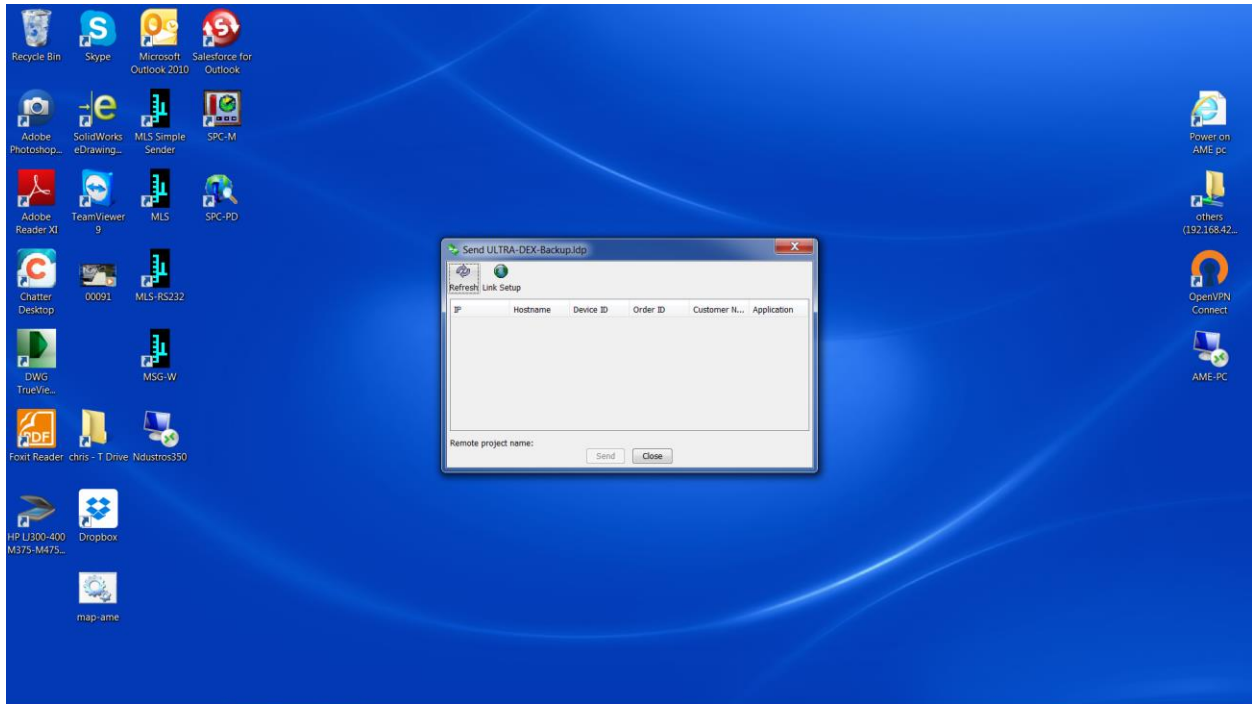


Click the Link Setup button and choose Direct Connection like shown below.

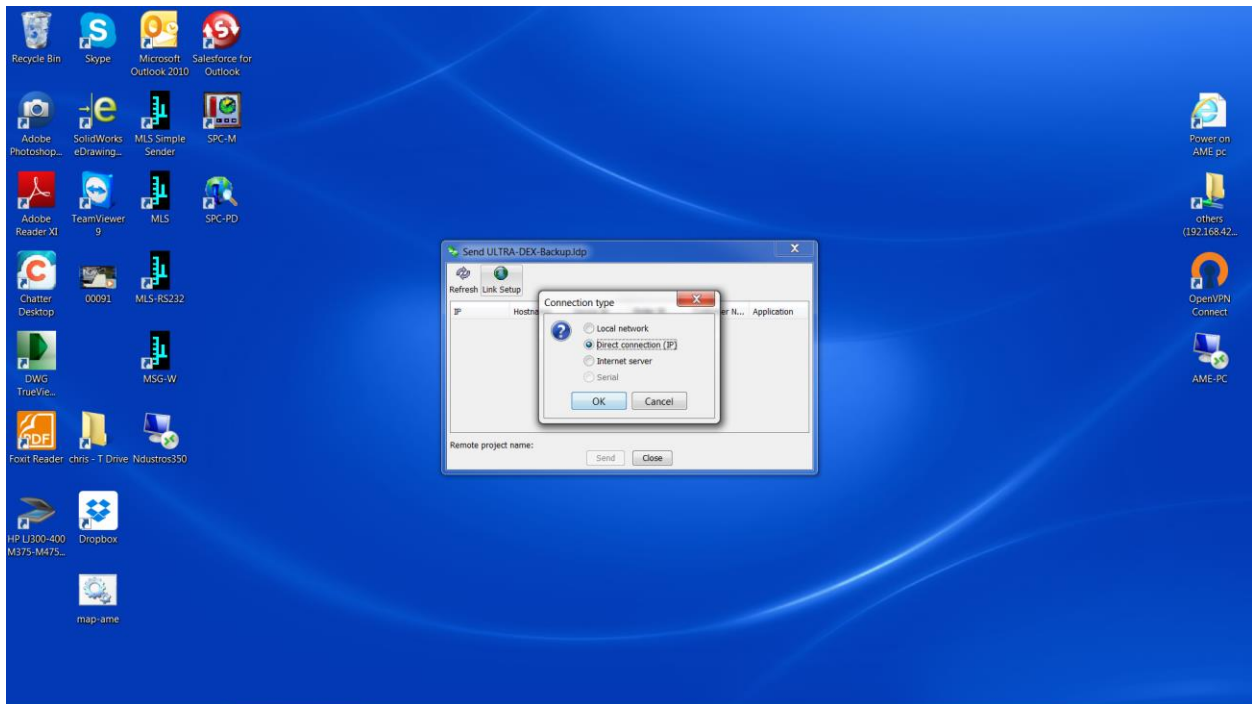


Enter the IP address 192.168.11.128 (as long as you haven't changed this on the MSM) and hit OK

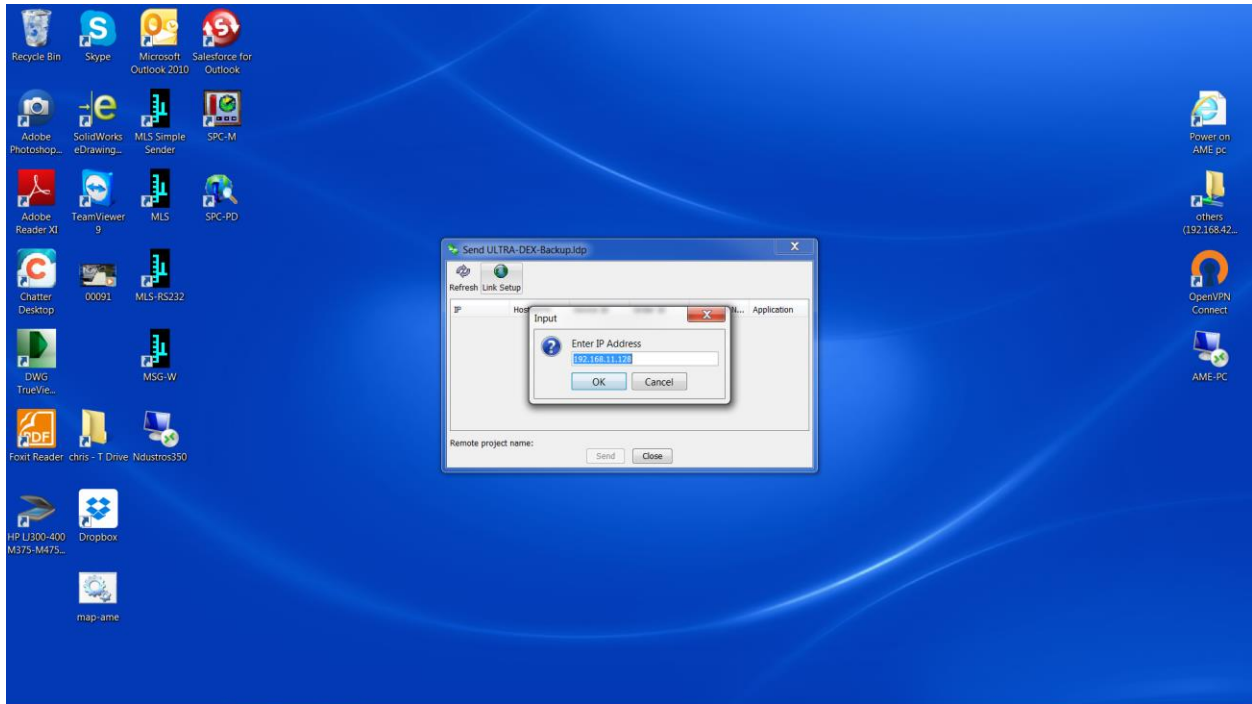


You should now see the column as shown below highlighted in blue. Hit the SEND button.

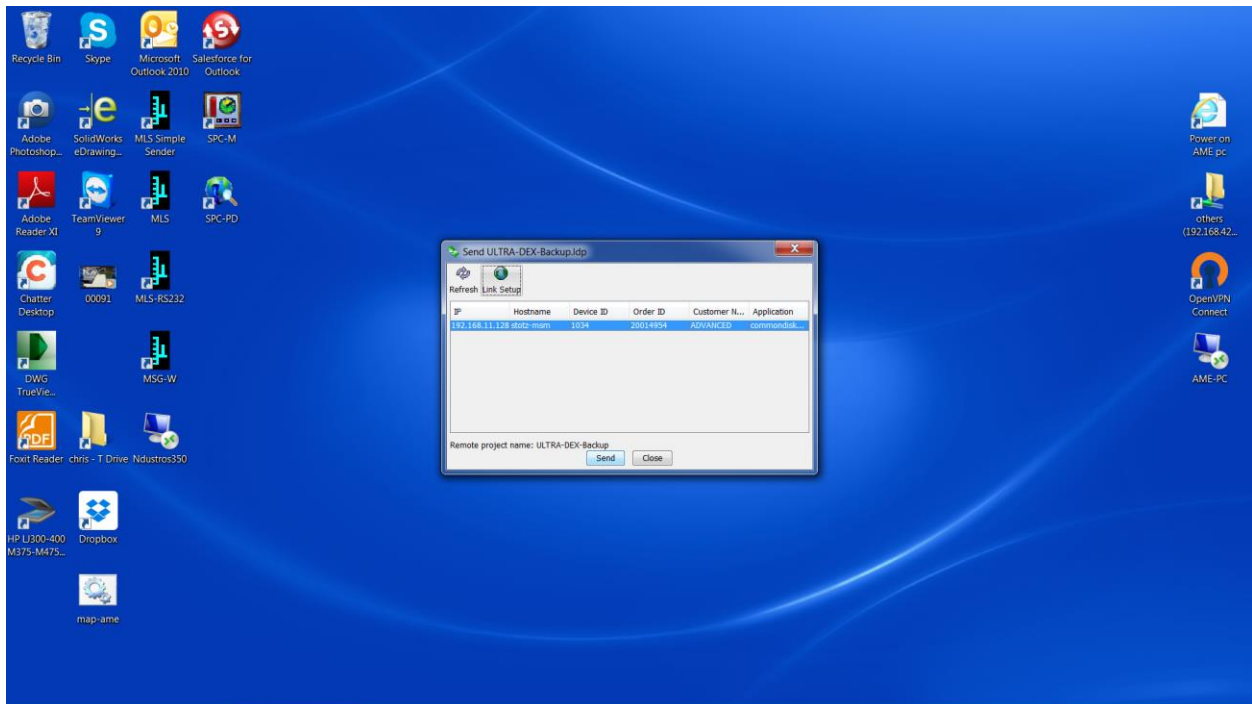


When asked the question below hit YES.

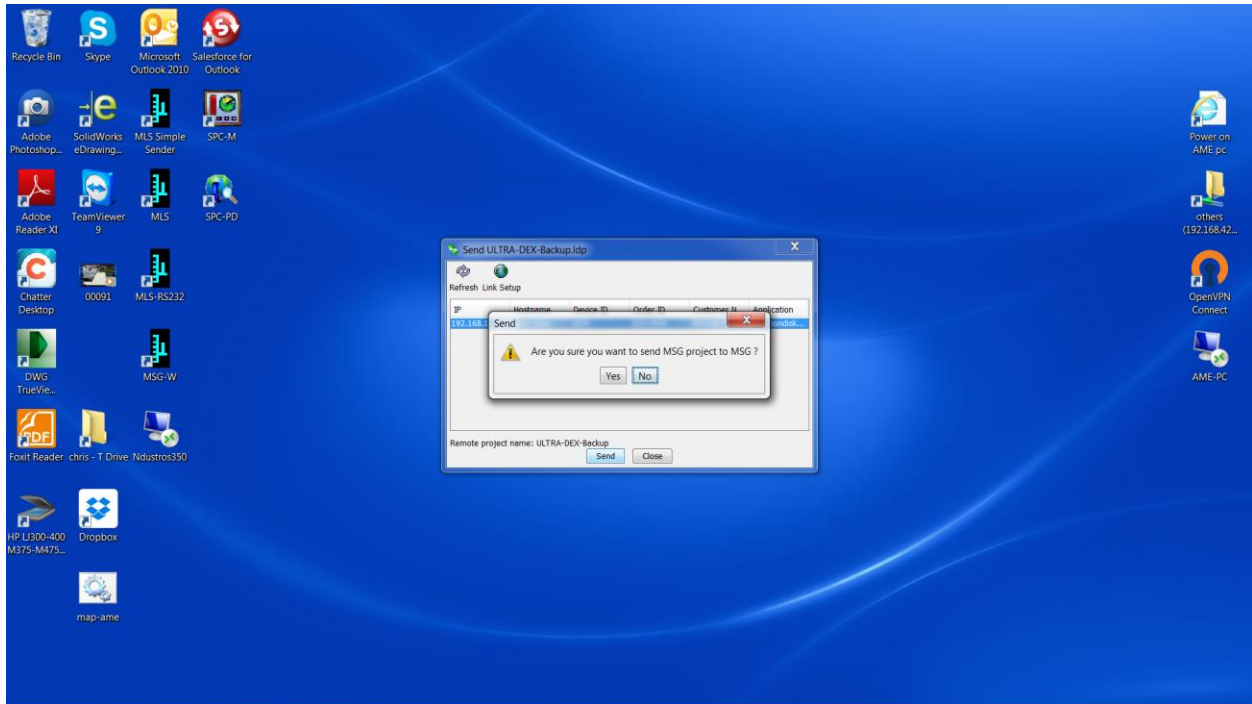


When asked the question below hit YES.

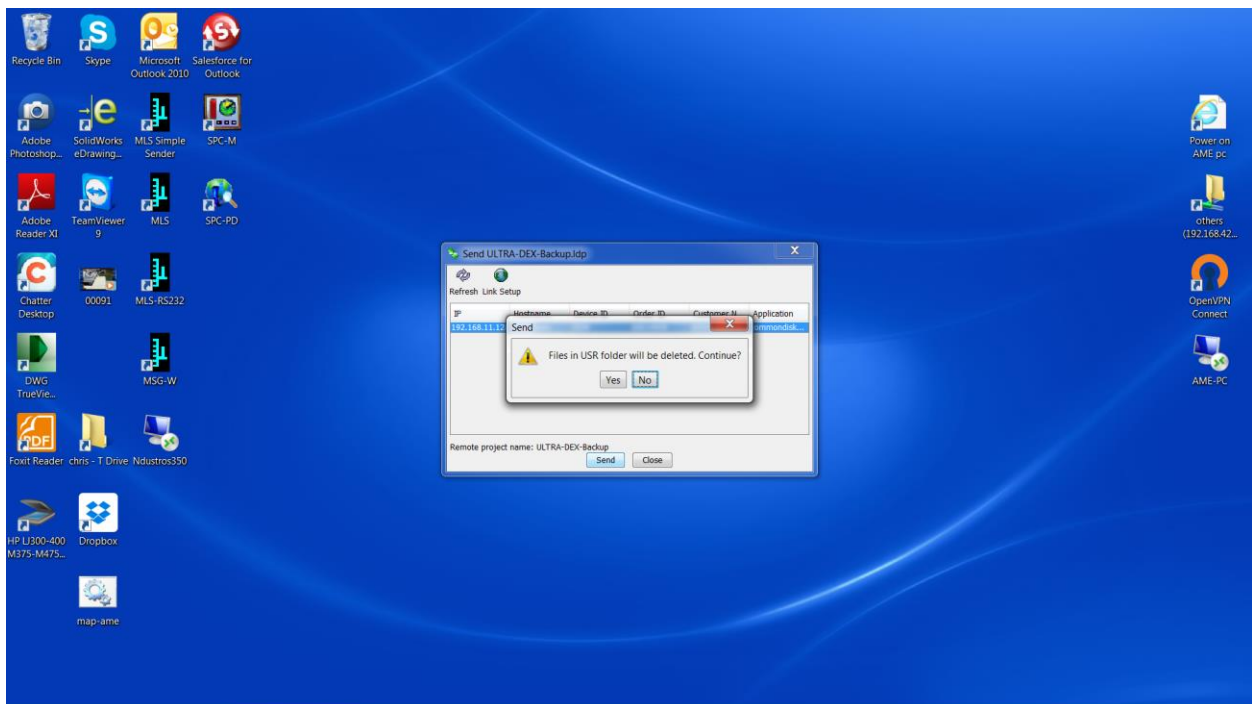

When asked the question below hit YES.

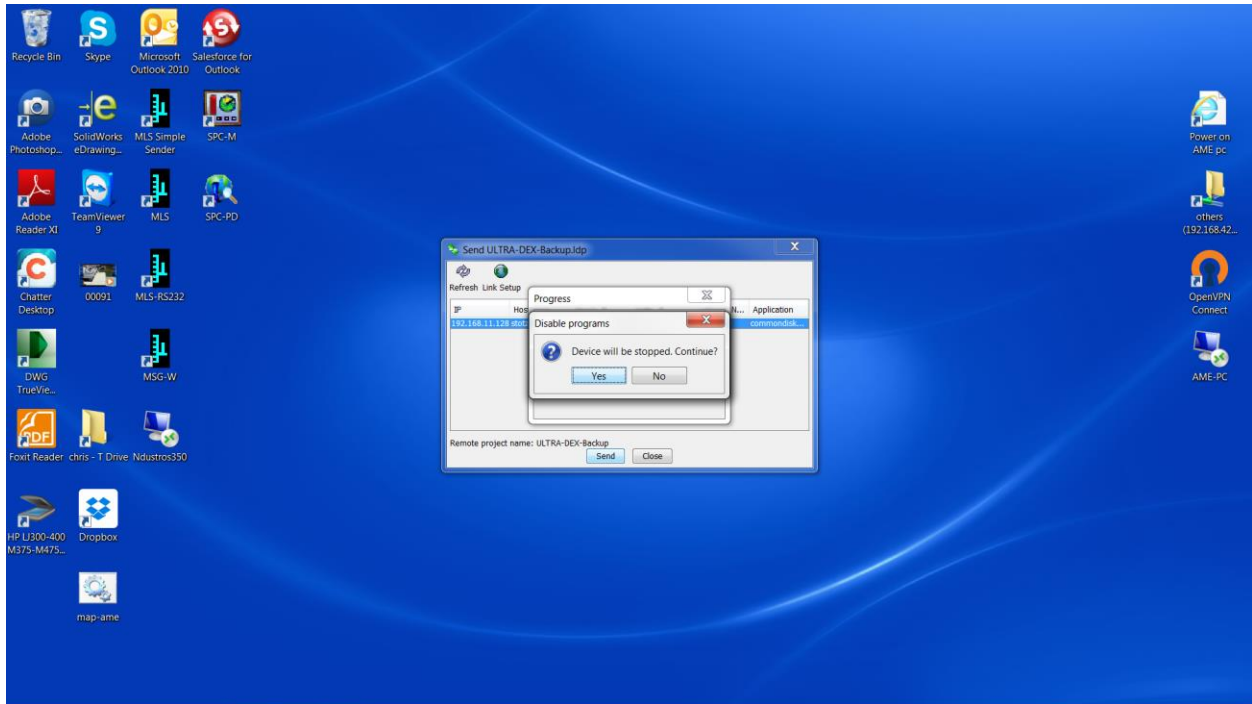

The process will take a few minutes. Once done it will ask you to reboot. Select YES.

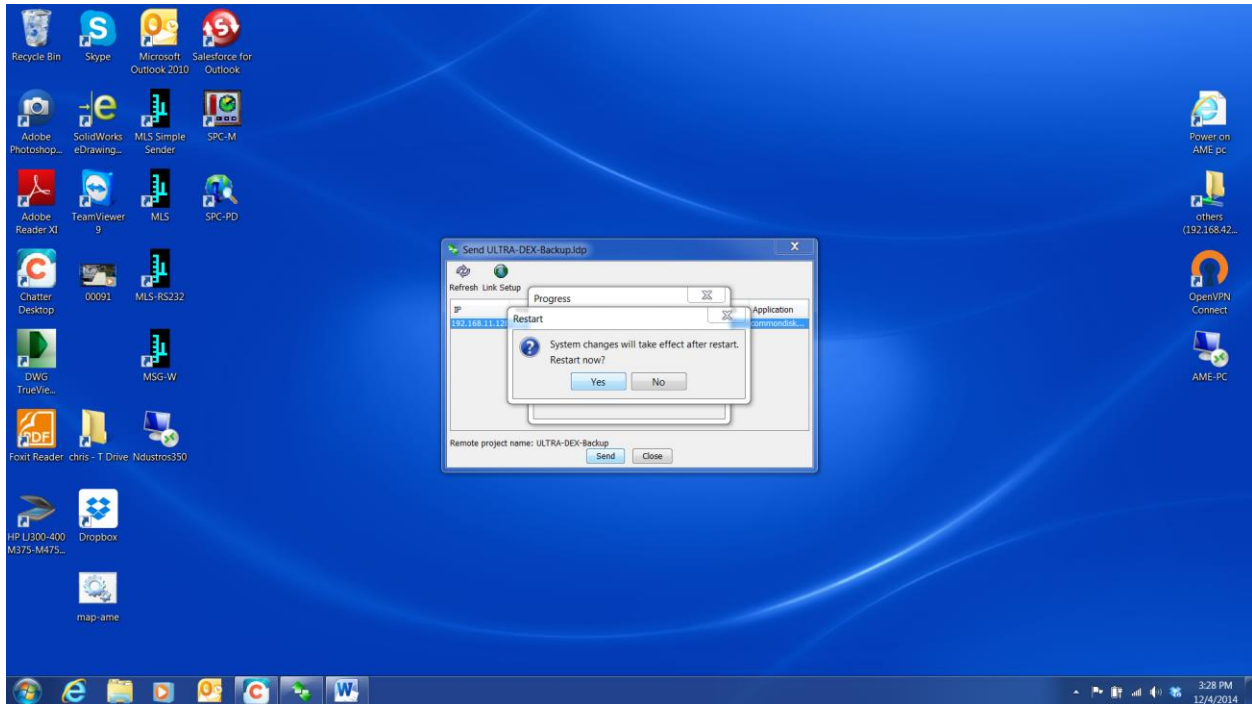

You will then be back to this screen and can close the program. The program is now in the MSM column and is ready for use.

